

1946 S. Myrtle Ave, Suite B


Monrovia, CA 91016

+1-626-294-1777 Phone

customerservice@grandstands.com

www.grandstands.com

ACE20-HD-2DB MONITOR ARM

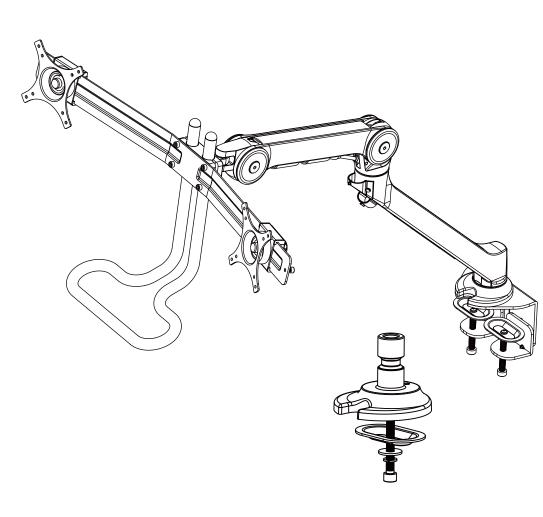



Please Note!

Please pay careful attention to all instructions for mounting and adjusting the 5 friction joints:

Height Control

Tilt Control

Rear Pivot

Center Pivot

Front Pivot


The ACE monitor arm can support monitors, tablets, writing trays, virtually anything that needs 3D adjustability across a wide range of space.



How to Level the Monitors


STEP 1


The weight of the two monitors must be centered at the middle of the Spanner Bar. Slide monitors left-right as necessary to achieve this balance. This may result in the two VESA brackets being off-center (see picture below)

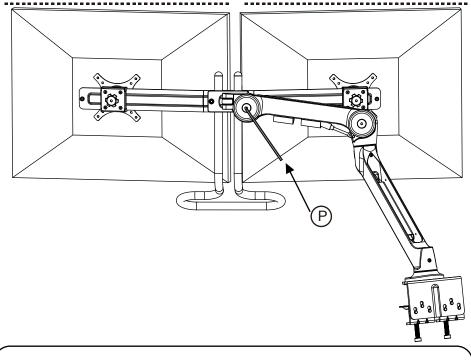



STEP 2

adjust the bolt at the upper hub in small increments clockwise or counterclockwise to help level the Spanner Bar (see picture above)

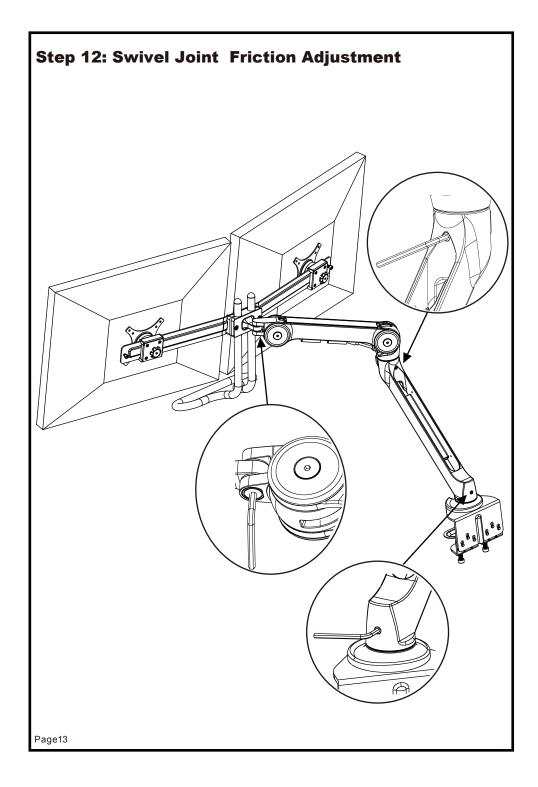

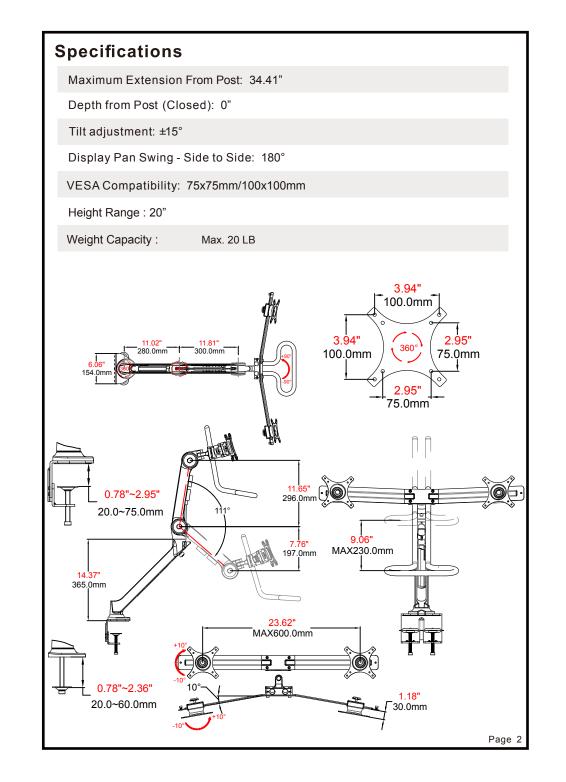

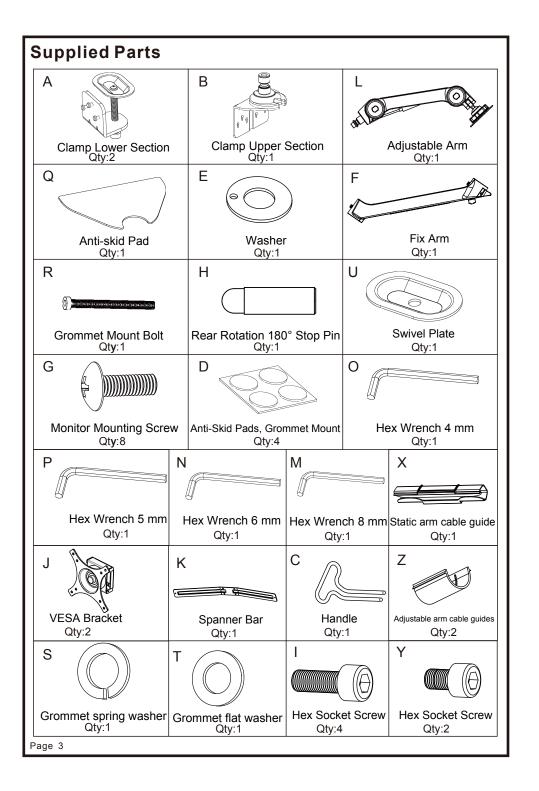


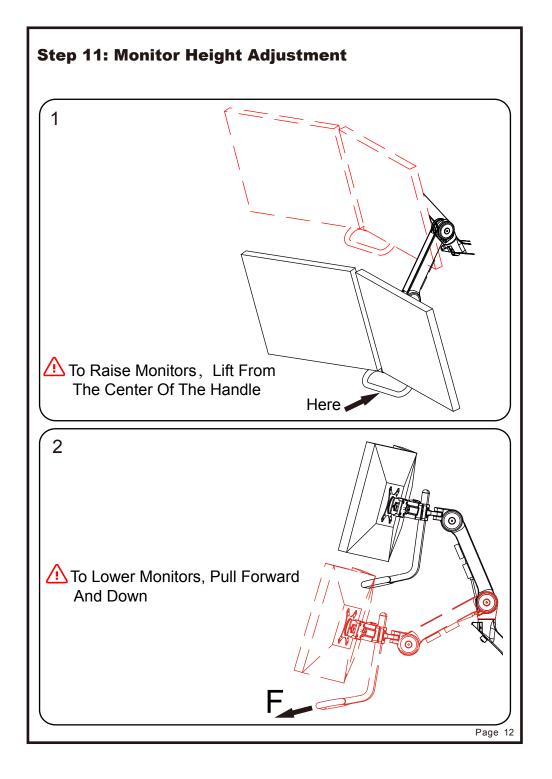


Step 10: Monitor Weight Friction Adjustment


The ACE monitor arm uses a novel one-way friction device to hold the weight of the monitor(s). To set the ideal amount of friction, mount your monitor to arm and raise the arm to horizontal (parallel to desk). If the monitor does not hold height, increase friction by turning bolt clockwise until arm holds monitor when horizontal. Do not over-tighten bolt; too much friction will result in an unnecessary amount of force required to lower the monitor


TO PREVENT FAILURE OF ARM, DO NOT TURN FRICTION ADJUSTMENT BOLT MORE THAN ONE (1) FULL TURN COUNTERCLOCKWISE

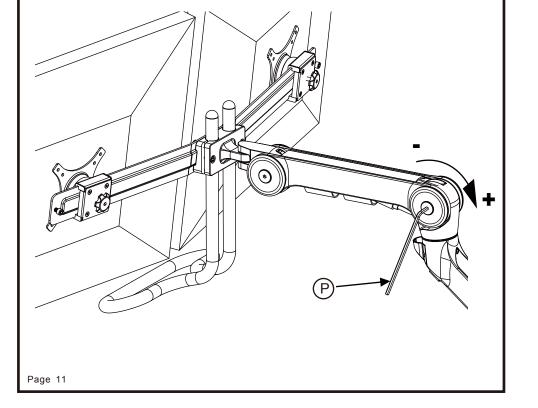


Step 1: Clamp Mount (Option A)

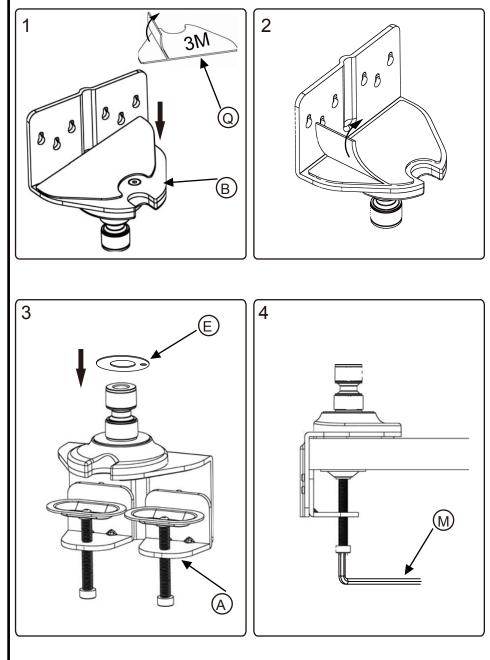

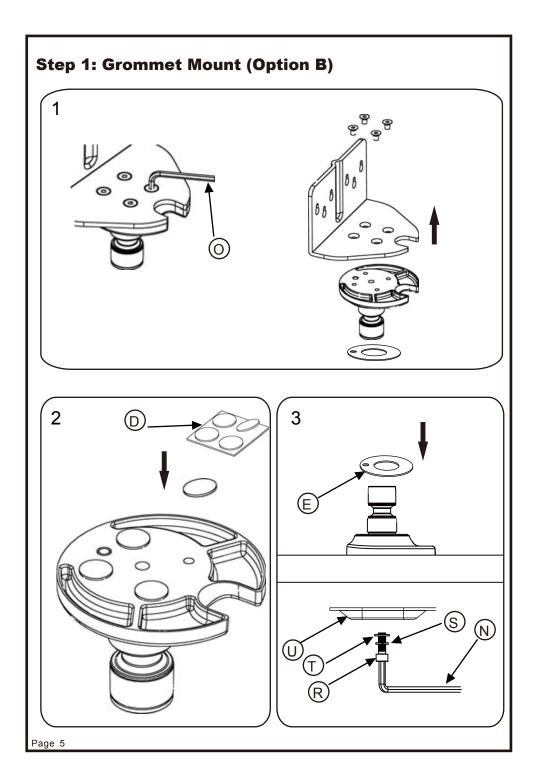

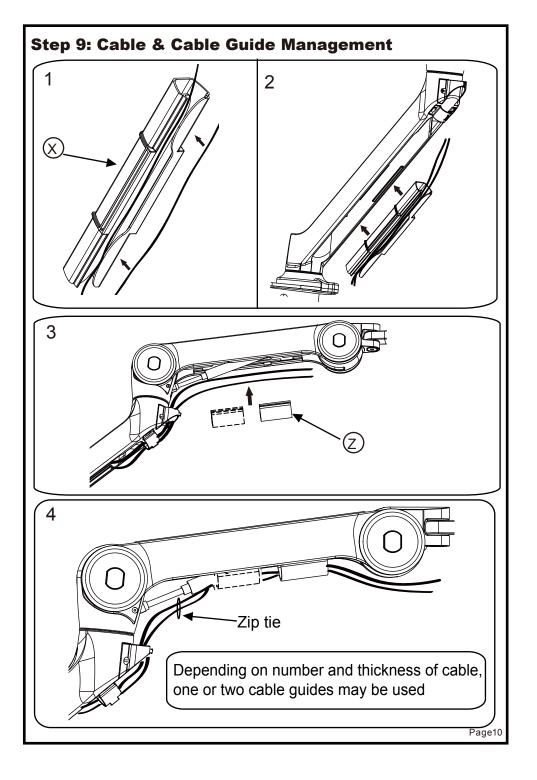

Step 8: Align Handle With Two Holes On Mounting Bracket & Slide into, Set The Handle Height Just Below The Bottom Of The Monitor .Then Fasten Two Handle Locking Screws After Handle Height Adjustment Finished.

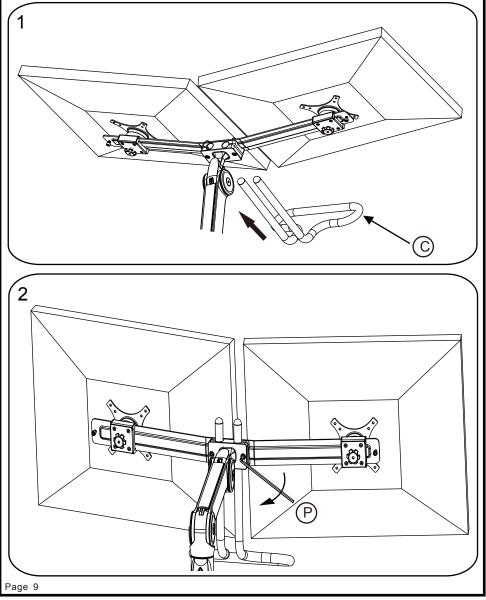

Step 2: Choose 180°or 360°stop at Rear Pivot

