


User Manual

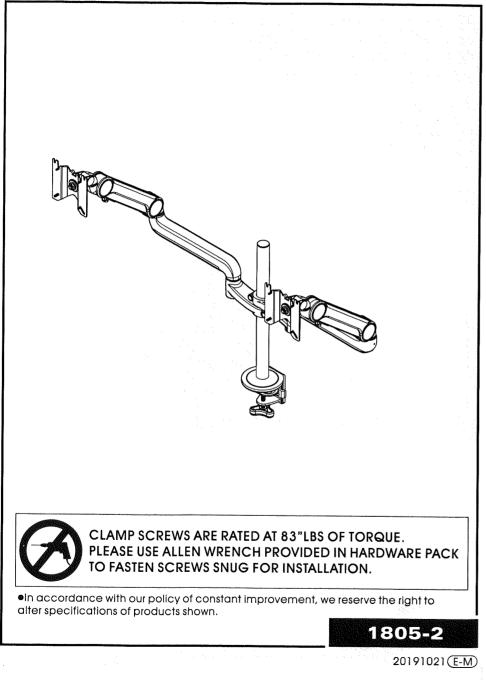


Before assembly please spend some time reading this and follow the procedures step by step. Some panels are viewed differently from the detail drawing below. This is for extra clarity. Do not discard any of the packaging until you have checked all the parts and tools. If you are missing any of the parts, please contact your supplier.

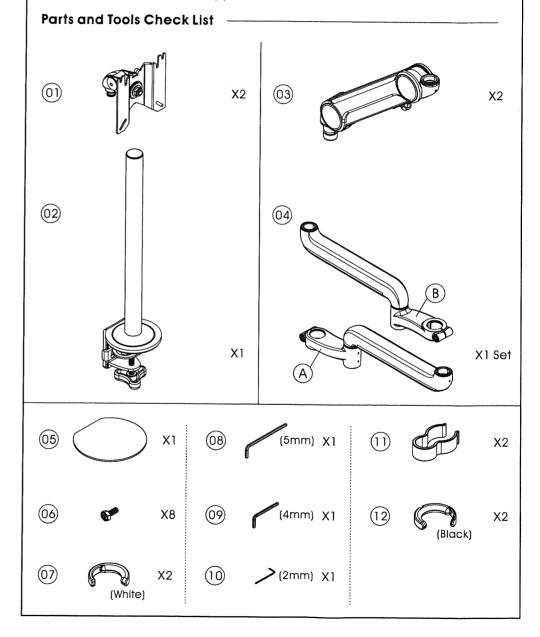

Assembly Guide

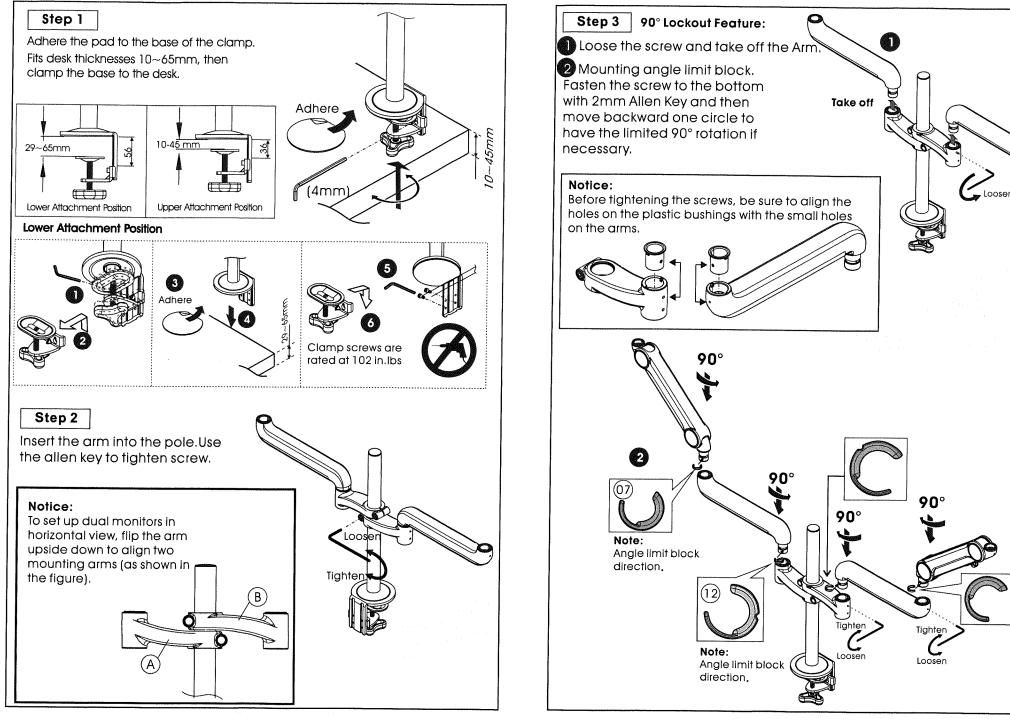

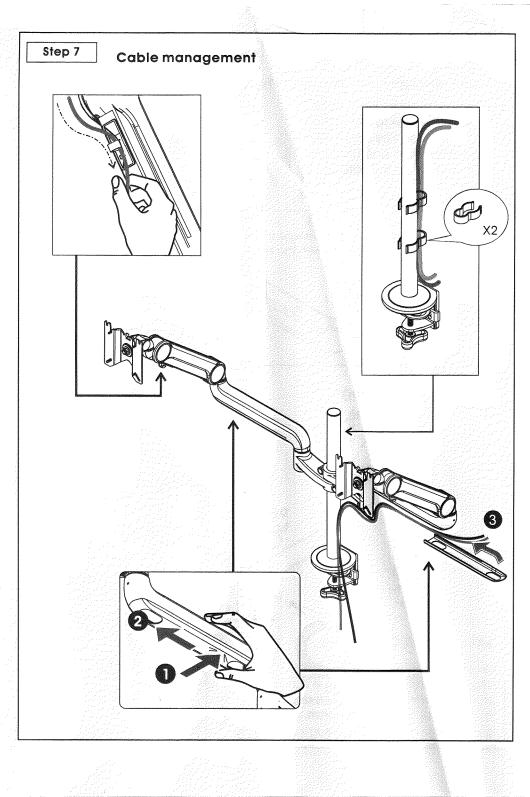


Tension Adjustment

Caution:

Support arm while adjusting tension.

Adjustment:

Use the 5mm Allen key provided to adjust the tension to correspond to the weight of the monitor. Twist the Allen key in a clockwise direction for heavier monitors; counterclockwise for lighter monitors.

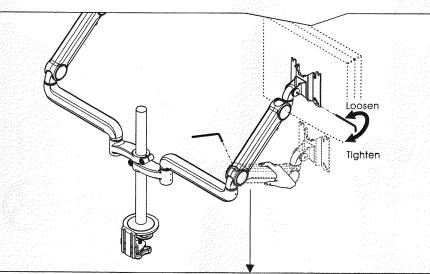


Use the 4mm Allen key provided to adjust the tension to correspond to the weight of the monitor. Twist the Allen key in a clockwise direction for lighter monitors; counterclockwise for heavier monitors.


Loading: (Single Arm) $4.4 \sim 19.8$ lbs (2 \sim 9 kg)

• Product loading capacities are based on monitors' center of gravity less than 3cm (1 3/16") from the end of the VESA interface.

• Loading capacity could be reduced if monitor size is greater than 26" or depth is greater than 5.5cm (2 11/64").

• All product specifications in catalogs are subject to change without notice.

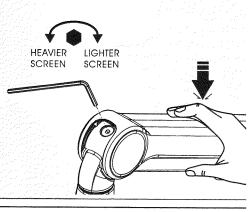

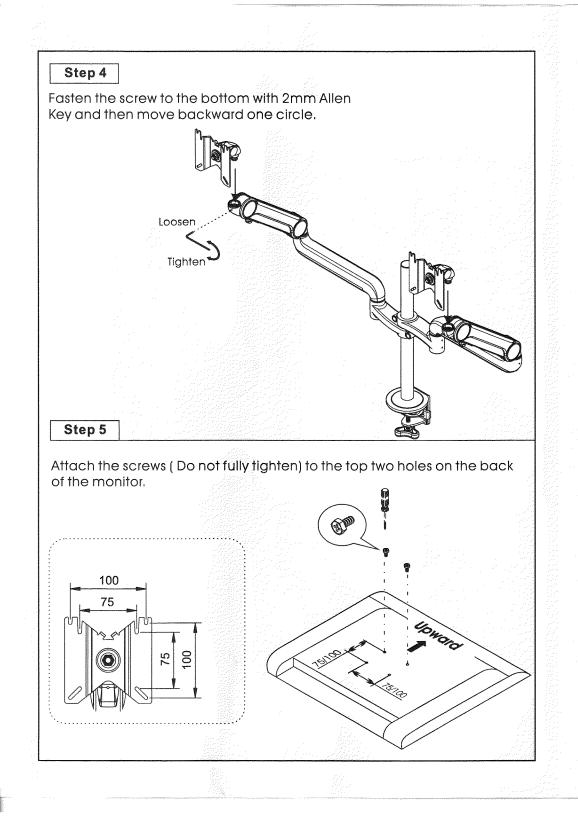

Step 6

S.

C.S.

Hook the monitor onto the VESA mount. Tightly Install screws into the bottom two holes, then tighten the top two screws.