

Using the BTM switch, there are 3 function buttons.



 
(A) Reminder (B) Bluetooth (C) Favorite

To raise or increase the display number



Tilting the switch will activate the travel or perform setting tasks

To lower or decrease the display number

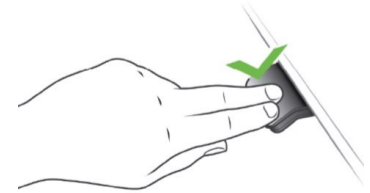

### Setting the displayed height of the table

1. Press the Reminder (A) and the Bluetooth (B) buttons at the same time for 5 seconds or until the displayed height begins to flash.
2. Tilt the switch up to increase the number or down to decrease.
3. Wait 10 seconds for the height to automatically confirm and lock in.

### Setting desk height limits

Minimum height limits are only stops, when re-initialization is required, the lifting columns will have to fully close with no obstructions.

#### Upper Limit

1. Adjust the surface to the desired upper height
2. Press the (B) Bluetooth button and tilt up at the same time for 8 seconds until light flashes
3. Release the button and the tilt

#### Lower Limit

1. Adjust the surface to the desired low height
2. Press the (B) Bluetooth button and tilt up at the same time for 8 seconds until light flashes
3. Release the button and the tilt



(A) Reminder (B) Bluetooth (C) Favorite

### Setting a memory position

1. Adjust the surface to the desired height
2. Press the ( C ) favorite button for 2 seconds

The display will flash white 2 times while saving, once it is static white, it is saved.

Auto drive is possible for “Autodrive” drive enabled on the Linak Desk Control App

1. Double-tilt the BTM switch in the direction of the desired travel, the table will go the next saved position

### Erasing the saved position

1. Press and Favorite ( C ) button for 8 seconds to erase all saved positions

### Connecting to the Linak Desk Control app

1. Find Linak “Desk Control “ app in iTunes, Apple, Google or Microsoft store and download
2. Press the (B) Bluetooth button for 2 seconds to enable pairing mode, the LED flashes red when in the pairing mode
3. Follow the apps instruction for use.